

## DESTINY OWNER'S MANUAL

### DESTINY

You have made a wise decision to protect your family and property with the DESTINY Security System. The DESTINY has been designed to provide you with a maximum level of security while being as simple as possible to understand and operate.

Your DESTINY Security System consists of:

1. **Control Panel**
2. **Detection Devices**
3. **Your Telephones**
4. **Keypads**

### CONTROL PANEL

The control panel is the heart of the security system and includes a communicator, which transmits information to the central station. The control panel is housed in a metal cabinet, which should only be opened by a qualified security system technician.

### DETECTION DEVICES

The detection devices continually monitor the status of the premises. **Switches** will alert the control panel of an open door or window. A **transmitter**, or wireless device, will do the same as a switch, plus it will indicate when it has a weak battery or has lost contact with the panel. The **glass break detector** is exactly what the name implies; it picks up the frequency of breaking glass and instantly alerts the control panel. A **motion detector** is used as a second line of defense to detect intruders within a protected area. The DESTINY system also incorporates several "24-hour" features such as the **smoke detector, gas and heat detectors, 'panic pendants'**, and **keypad panic** buttons. "24-hour" devices are always active regardless of the arming status of the panel.

### TELEPHONE AND KEYPADS

Your telephones and keypads are used to send commands to and receive information from your security system. Because your phones and keypads are your access to operating the security system, the main emphasis of the user's manual is to help you understand their operation.

**The DESTINY control panel** provides many "convenience related" features and options that greatly enhance the system's specific configuration; you may or may not have the following options integrated into your control panel.

### NOTE: PLEASE CONSULT YOUR INSTALLER ON AVAILABLE FEATURES FOR SELECTED DESTINY SERIES PANEL

#### ENHANCED FEATURES AND OPTIONS:

- ⌘ automatic arming/disarming based on time of day
- ⌘ 2-way voice with central station for alarm verification
- ⌘ homeowner listen-in from local or remote phones
- ⌘ homeowner global paging from local or remote phones
- ⌘ automatic control of lights and appliances based on time of day, sunrise/sunset, or system event triggers
- ⌘ manual control of lights and appliances from keypads, local or remote telephones and keyfobs
- ⌘ complete energy management functions
  - ⌘ spoken temperature upon request from keypads, local and remote phones
  - ⌘ automatic and manual thermostat setback/forward operation

⌘ thermostat control by time of day, or system event trigger

**SPECIALIZED “CONVENIENCE” FEATURES AND OPTIONS:**

- ⌘ electric garage door operation from keypads, phones or keyfobs
- ⌘ front door visitor-to-homeowner communications without opening door
- ⌘ motion activated lighting
- ⌘ vehicle activated driveway annunciation

**RK-36 LED / RKLCD / 6160AP– LED’s**

**POWER**

On when AC or back-up battery power is present. If AC power is lost, the STATUS LED will flash, the system will speak “POWER OFF” one time, and the system will emit a trouble beep every few seconds until the power is restored or the STATUS key is pressed to silence it.

**STATUS**

Yellow LED will be flashing when new information is available, solid after status has been asked for and spoken, and off when no information is present. **WHEN THE SYSTEM CONTINUOUSLY BEEPS (indicating a system trouble), PRESS THE STATUS KEY TO SILENCE THE BEEPING AND SPEAK A DESCRIPTION OF THE TROUBLE.**

**HOME**

Red LED is on when armed to HOME. Press H to arm to HOME. Will also be on during NIGHT mode.

**AWAY**

Green LED is on when armed to AWAY. Press A to arm to AWAY. Will also be on during NIGHT mode.

**NIGHT**

While there is not a dedicated “NIGHT” LED, when the system is armed in the NIGHT mode, both the HOME and AWAY LED’s will be on simultaneously. Press H any time the system is already armed to HOME to change to NIGHT. Pressing H when system is armed to NIGHT will change the arming back to HOME. For example: You are at home and do not plan on leaving the house anytime soon so you arm the system to the HOME mode. Several hours later you go to bed and simply press the H button again arming your system to the NIGHT mode for greater protection while you are sleeping. When you wake up in the morning simply press the H button again and you are able to walk around your house without fear of setting the alarm off.

NOTE: Some model keypads may have a single “ARMED” LED, which is illuminated if the system is armed in any mode (AWAY, HOME, or NIGHT).

**RK-36 LED / RKLCD / 6160AP KEYPADS – SPECIAL KEYS**

**STATUS**

Pressing this key will cause the system to immediately speak the system status. This will include the arming status, any zones showing open, alert, or trouble, and any other available panel information.

**MONITOR**

Pressing this key toggles the system between three possible monitor conditions.

MONITOR ON – System will announce doors and windows when opened

MONITOR OFF – System will not announce doors and windows when opened

MONITOR TONE – System will beep instead of speak when doors and windows are opened. Commonly called “chime”.

## F1 AND F2

These key functions are programmable and will be explained by your installer.  
At default these keys will:

**F1: Enter Remote Control Mode** (Controls home automation features)  
**F2: Speaks Time and Date**

Choose from the following list for the functions of your **F1** and **F2** keys:

Speak Time	Set Time	Enter Bypass Mode
Speak Long Term Memory	Enter Remote Control	Silence Day Zone
Light/Appliance Control	Relay Output	

New Functions for Keys:

**F1** \_\_\_\_\_  
**F2** \_\_\_\_\_

## KEYPAD KEY-COMBINATION ALARM ACTIVATIONS

Simultaneously pressing certain key combinations on the keypad will result in the following events:

**3** and **STATUS**- FIRE Alarm  
**1** and **STATUS** for 6160AP

**6** and **MONITOR** – EMERGENCY (Medical) Alarm  
**4** and **MONITOR** for 6160AP

**9** and **F1** – PANIC Alarm  
**7** and **F1** for 6160AP

The following 2-digit functions are only available from the system keypads and not from the phones:  
(Both of the indicated keys must be pressed simultaneously).

⌘ **2 & 8** changes time of day and date in the system clock

⌘ **4 & 7** changes keypad backlighting intensity

## CHANGING THE CLOCK TIME

To set or change the system time, press the 2 & 8 keys simultaneously from a hardwired keypad. The system will respond by speaking “enter four-digit time.” Simply enter the time in a 12-hour format. After the time is entered, the system will say “enter 1 for AM, 2 for PM.” After selecting AM or PM, the system will confirm the entered time. If an invalid entry is made, the system will speak “error” and wait for a valid entry. It will then prompt you to enter the day: 1 SUNDAY, 2 MONDAY... simply enter the appropriate number for the corresponding day. It will then ask you to enter the two-digit month, followed by two-digit date, and the two-digit year. After entering the values the system will speak the month day and year, followed by “exit”.

## BACKLIGHT INTENSITY

You can control the brightness level of the key backlighting. The simultaneous depression of the 4 and 7 keys will step the backlighting through seven different levels of brightness. Press 4 and 7 simultaneously a number of times until the backlighting is totally off. We define all backlighting off as level 1. Levels 2 through 6 will take the key backlighting through 5 progressively brighter levels. One step beyond the brightest level will take the backlighting to half intensity.

## **RKLCD / 6160AP KEYPAD DISPLAY**

The RKLCD keypad has a 2-line LCD display. This will display system arming status as well as any other existing zone or panel conditions. The following abbreviations are used in the LCD display:

AL – Alert – The associated device has caused an alarm

TR – Trouble/Tamper – Most likely a wireless transmitter cover has been removed

BP – Bypass – The associated device is temporarily out of the system

LB – Low Battery – A wireless transmitter's battery needs replacement

The rate at which the LCD display cycles through its reports is adjustable. Pressing the 5 and 8 keys simultaneously will advance to the next one of four speed levels.

## **ARMING**

When referring to the operation of the phone, the following instructions will assume that access to the system has already taken place. (See local and remote phone access) Remember, your installer has programmed a one to four digit code which you will enter when you pick up the on premise phone to get access to the system.

How to **TURN ON** (ARM) the alarm system to provide protection:

### **1. Arming the system to AWAY:**

Press the **A** key on a system keypad,

Or

Press the \* key during local or remote phone access,

Or

Press the appropriate button on a wireless keyfob.

If no zones are open, the green AWAY LED will light and the system will say "ARMED TO AWAY" over the phone or through the speaker.

The security system is now on, or armed. When armed in the AWAY mode, all interior zones including motion detectors, become active, as well as all perimeter zones. If any zone is open while attempting to arm the system, the AWAY LED will not light and the system will say "Zones open" over the phone or through the speaker, indicating that the system did NOT arm because a door, or window is OPEN. (See FORCE ARM to continue)

After you have ARMED the system, you must leave through the designated entry/exit door within the specified exit delay time. Your installer can program the exit delay time you desire.

**NOTE:** If a zone is opened before the exit delay time expires, or the system is forced armed, then that zone will **NOT** be part of the system until that zone is closed. **EXAMPLE:** You force arm the system to "AWAY" with the front door open, and forget to close that door when you leave. The front door is **NOT** protected. If the door is closed while the system is still armed, it will rejoin the system and will be protected.

### **2. Arming the system to HOME:**

Push the **H** key on a system keypad,

Or

Press the # key during local or remote phone access,

Or

Press the appropriate button on a wireless keyfob.

If no zones are open, the red HOME LED will light and you will hear the system say “ARMED TO HOME” over the phone or through the speaker.

The security system is now on, or armed. When armed to the HOME mode, only the exterior, or perimeter, zones are armed. This will allow you to move about freely within your home. If any zone is open while attempting to arm the system, the HOME LED will not light and you will hear the system say “ZONES OPEN” over the phone or through the speaker, which indicates that the system did NOT arm. (See FORCE ARMING to continue)

**3. Arming the system to NIGHT: (optional)**

Push the **H** key twice on a system keypad,  
Or  
Press the # key twice during local or remote phone access,

The green AWAY LED will light with the red HOME LED and the system will say “ARMED TO NIGHT” over the phone or through the speaker. When armed to the NIGHT mode, the perimeter entry delay zones become instant (no entry or exit delay) and your installer may program some interior zones to be active. If you wish to return to the HOME mode, simply push the # or H key any time the system is in the NIGHT mode.

**4. Force arming the system:**

If you attempt to arm the system to either HOME or AWAY but you hear “ZONES OPEN” over the phone or through the speaker and notice that neither the HOME LED nor the AWAY LED has come on, the system is NOT armed. However, the system can be FORCED ARMED.

Push the appropriate button for the type of arming you want again, # or H for HOME, \* or A for AWAY, within ten seconds. If arming to HOME, the RED LED will now light and “FORCE ARMED TO HOME” will be heard indicating that the system is now ARMED to HOME. If arming to AWAY, the green AWAY LED will now light and “FORCE ARMED TO AWAY” will be heard. When FORCE ARMED either to HOME or AWAY, the yellow STATUS LED will be lit. You can find out which zones are open by requesting system status.

NOTE: When you FORCE ARM your system, security is compromised because the open zone will be ignored by the system. Check with your installer to determine how the open zone will again be part of the system.

**QUICK REFERENCE GUIDE:**

ARMING MODE	HOW TO...	EXIT DELAY	ENTRY DELAY	PERIMETER ARMED	INTERIOR ARMED
AWAY	* OR A	YES	YES	YES	YES
HOME	# OR H	YES	YES	YES	NO
NIGHT	# OR H x 2	NO	NO	YES	NO *

\* Some interior zones can be programmed by the installer to be active in the NIGHT mode.

NOTE: Some model keypads may have a single “ARMED” LED.

## **5. Preventing accidental arming:**

If you want to prevent anyone from accidentally arming the system, your installer can program the alarm system to require your disarm code to also serve as an arming code. When programmed to this option, you must enter your code before you press the \* or **A** key (AWAY mode) or # or **H** key (HOME mode) to arm the system.

## **DISARMING**

### **How to TURN OFF the alarm system**

Enter your disarm code.

When the system is disarmed, you will hear “CONTROL IS DISARMED” over the phone or through the speaker and the red HOME LED and/or green AWAY LED will go out.

When you open an entry door while the system is armed to AWAY, you may hear a “PRE-ALARM” spoken instead of hearing the tone. The PRE-ALARM is “ENTRY DETECTED” followed by a brief description of the zone that has been violated. For example: After opening the front door while the system is armed to the AWAY mode the system will speak, “ENTRY DETECTED FRONT DOOR”. This will continue until you enter your disarm code or entry delay expires. You have 20 seconds to disarm the system before the BURGLAR alarm activates. Your installer can increase or decrease this time at your request.

If an alarm activation has occurred while you were away, each pre alarm “Entry Detected” annunciation will be preceded by a “SYSTEM SHOWING ALERT” announcement. In addition, the yellow STATUS LED will be flashing. Pressing the status key on the keypad will cause the system to announce which zone(s) are showing ALERT.

In the unlikely event of a “FALSE” or “ACCIDENTAL” ALARM, enter your code to disarm the system and stop the audible alarms. Check with your installer and/or central station to determine the proper procedure for dealing with false or accidental alarms. Depending on the structure of your central station, you may need to notify the central station or they may call you. In either event, be prepared to recite your central station account number or abort code to verify your identity.

### **CLEARING ALERT STATUS FROM KEYPAD DISPLAY**

After the system has been disarmed following an alarm activation, the STATUS LED will be flashing and the system status will display (or speak if requested) the violated zone’s description followed by “ALERT”. This is useful for determining which zone(s) were activated after the alarm has been silenced. To clear the ALERT status, simply re-arm the panel and disarm.

## **BYPASS**

To BYPASS a zone is to temporarily remove that zone from the system. To enter BYPASS mode, your system must be disarmed. Make sure the system is disarmed and follow the steps below:

1. Enter your disarm code and immediately press the **9** key to gain entry into BYPASS mode. You will hear “BYPASS MODE, ENTER ZONE NUMBER.”

2. Enter the two digit number of the zone (use a leading zero if necessary, 01,02...) you wish to bypass. (Your installer can provide you with a zone list, if needed). You will hear a description of the selected zone, followed by, BYPASSED ON or OFF. Only zones that exist in the system can be bypassed. If an invalid number is entered, refusal will be signaled by three beeps.
3. Press the \* or A key to toggle between on and off. (A "BYPASSED ON" condition indicates that the zone is bypassed). The yellow STATUS LED will light to indicate that the zone is bypassed. The RKLCD keypad will display the zone descriptor in the LCD display. A second push of the \* or A key within 10 seconds will remove the zone from bypass and the yellow STATUS LED will clear as well as the zone descriptor on the LCD display.
4. Pressing **00** while in BYPASS mode will clear (unbypass) all bypassed zones.
5. Press the # or H key to exit BYPASS mode, or the system will exit in 5 seconds. You will hear the system speak "EXIT".

**EXAMPLE:**

Assuming primary code is **1,2,3,4**, and zone number 1 is the front door:

Enter **1,2,3,4 & 9**

**"BYPASS MODE, ENTER ZONE NUMBER"**

Enter **01** (Zone number one)

**"FRONT DOOR BYPASS OFF"** (Currently not bypassed)

Press \* or A key to turn zone bypass ON

**"FRONT DOOR BYPASS ON"** (Zone is now bypassed)

Press # or H; system will speak **EXIT**.

Zone one is now bypassed. This gives you the ability to have the system armed but open and close the front door without setting off the BURGLAR alarm. Follow the same steps to remove that door from the bypass mode and return it to normal activation.

**PHONE ACCESS**

**LOCAL PHONE ACCESS**

**Using your Phones as Keypads**

The system is programmed to allow you the use of your home telephones as keypads. You will notice that the keypad duplicates the keys of your phone. The \* replaces the A key and the # replaces the H key. Throughout this manual we will refer to both types of keys. Your installer will let you know which key or keys allow you to access the system from the phones. The local phone access code must be entered within **5** seconds of picking up the telephone. If the correct code is entered within **5** seconds, you will hear the system acknowledgement tone or system status. At this point you can control the system just like you would any hardwired keypad. Have the installer demonstrate this feature so you become familiar with the different characteristics of your system.

**EXAMPLE**

Assuming the local phone access code is \*, #: (Default)

1. Pick up phone and press the \* key and then the # key.
2. Panel will respond with an acknowledgement tone.

Now you are into the keypad mode. Also see: KEYPAD AND PHONE DIGIT QUICK REFERENCE

**NOTE:** If your regular phone line is out for any reason you will not hear a dial tone when you pick up a phone, however, you will hear a series of tones indicating the line is gone. If this is the case, there is no need to access the system because the phone will already be a system keypad when it is picked up. Press any key and the tones will stop. Now you may use the phone as a keypad. If your system reports to a central monitoring station, and there is an activation, you can pick up a phone while the panel is communicating and simply enter your disarm code. The system will recognize the phone as a keypad as soon as you pick it up.

**NOTE:** When you access the system from your home phone, your normal incoming phone line is disconnected. In case of an incoming call you will hear one-second tones similar to call waiting. To answer the call, simply hang up to terminate telephone keypad access.

### **PANIC FROM YOUR LOCAL PHONE**

Your installer can program the panel to allow a panic activation from any local phone. Once enabled, anytime you have accessed your system from an on-site phone, pressing the **0** key five times in a row will initiate a PANIC alarm.

**NOTE:** Never program a disarm code with all zeroes.

### **REMOTE PHONE ACCESS**

You can gain access to the system from any touch-tone phone when you are away from home. If you use an answering machine, your installer will program an override digit, which you will use to bypass the answering machine and get directly into the system. (Default is #). Note: The override digit will not allow you to bypass an off-site answering service. If you have a phone company answering service (no answering machine on site), your installer may enable an optional override-callback feature, which will allow you to bypass the voice mail and access the panel.

Following is a step-by-step description of phone access:

1. Dial home phone number from any touch tone phone.
2.
  - a. The system will answer after a programmed number of rings (default is 10 rings) and you will hear an acknowledgement tone indicating that your system is ready and waiting.
  - b. If you have an answering machine, wait for it to answer, then press the programmed override digit **immediately** and you will then hear the acknowledgement tone indicating that your system is ready and waiting. The override digit can be pressed more than once if the panel does not recognize the first attempt.
  - c. If you have an off-site answering service, your installer can enable an optional answering service override-callback feature. To use this feature, dial your residence and wait for 2 rings. Hang up after the second ring. Call the panel back within 25 seconds and it will pick up after the first ring and respond with the acknowledgement tone indicating the system is ready.
3. You must now enter your disarm code and the system will “speak” your system status. If you do not enter an acceptable code within 15 seconds of the tone you heard in step 2, the system will automatically hang up.
4. Now that you have entered your code and have received the system status, your telephone can be used as a keypad. To hear the status of your system again, press the first digit of your disarm code and wait three seconds. The system status will be repeated through your telephone receiver.

To disarm the system simply enter your disarm code. To arm it press either the \* to arm to AWAY or the # to arm to HOME. When finished simply hang up, and your system will automatically hang up at the other end. If you do not press any keys for 15 seconds your system will automatically hang up.

**NOTE:** Your installer can increase or decrease this inactivity time for your convenience.

### **What can you do from your phone?**

- Arm/Disarm system
- Check Status
- 2 Way/Listen in Mode
- Lights and Appliance Control
- Panic (From Local Phone Only)
- Change User Codes

## **GENERAL INFORMATION**

### **CHANGING/DELETING USER CODES**

The Destiny allows 32 different disarm codes. Check with your installer to find out how many codes you have enabled.

Assuming your primary code is **1,2,3,4**:

1. Enter your primary user code followed by “7”. Example: **1,2,3,4,7**.
2. The system will speak “ENTER USER NUMBER”.
3. Enter 2 digit user number, **(01-32)**. The system will speak “ENTER CODE **XX**” (**XX=01-32**)
4. Enter the new 4 digit code **or** hit the **A** key to delete the user code from step 3. If a new 4-digit code is entered the system will speak “EXIT” after the 4<sup>th</sup> digit. If a code is deleted the system will speak “CODE OUT, EXIT”.

Your auxiliary (non-primary) codes can be programmed by your installer with different properties:

a. Authority levels:

A user code has 1 of 2 authority levels. A full-function or “master” code can arm/disarm the system as well as access all the user code + digit functions listed below:

(Standard user codes can only arm/disarm the system).

User Code +1...speaks time

User Code +2...toggles monitor mode (on, off, tone)

User Code +3...toggles extended monitor A (on/off)

User Code +4...toggles extended monitor B (on/off)

User Code +5...silences day zone speech after activation

User Code +6...resets hardwire smoke detector

User Code +7...user code entry/delete mode (add/remove codes)

User Code +8...speaks long term memory (last 8 alarm activations)

User Code +9...manual bypass mode

User Code +0...Immediate communicator test / user test mode (no siren)

b. Disappearing codes:

One or more of your auxiliary codes can be programmed for a certain number of uses before it stops functioning. This is useful for domestic workers, repairmen, or houseguests who only need a limited number of times to arm/disarm the system. Your installer will program the number of uses a disappearing code has before it stops working. Once it expires, a disappearing code may be re-activated by re-assigning a code to it using the above code changing procedure.

c. Duress codes:

One or more of your auxiliary codes can be programmed as a duress or “hold-up” code. If entered while the system is disarmed, the panel will not give any audible or visible indication, but will send a duress report to Central Station. If entered while the system is armed, the panel will appear to disarm normally, but the panel will still send a duress report to Central Station.

## RESETTING AN ACTIVATED SMOKE DETECTOR

Whenever any of your wired (non-battery powered) smoke detectors activate the system, they will latch “ON” until you reset them. To do so, enter your primary code followed by **6**. The system will say “SMOKE POWER”. This will signify that the smoke detectors have been reset.

**EXAMPLE:** (Assuming that your primary code is 1,2,3,4)

Enter: **1,2,3,4,6**

System speaks: “SMOKE POWER”

**NOTE:** After a smoke alarm activation and system disarm, you will need to re-arm the system and disarm to clear the ALERT condition from the keypad.

## SILENCING STATUS TONES/BEEPING

During a ‘trouble’ situation, (such as loss of phone line, low battery) the system will emit a tone or beep to notify you that there is a problem. To stop this beeping simply press the STATUS key. Contact your alarm company to assist with any problems or failures.

## OPTIONAL EQUIPMENT

### LIGHTING OPTIONS:

The DESTINY security system gives you the ability to control many day to day functions manually, based on alarm or zone events, time of day, and even sunrise/sunset. Through the system you have the ability to control lights, appliances, garage door, and even your HVAC. Different lights could be activated for an alarm condition, for a entry / exit delay, or simply because you walked into a room. Imagine pulling into your driveway and having your front lights turn on without touching a single button. All these ‘Home control’ features can be controlled from your keypads, local phones, and remote phones, including cellular and cordless phones. Note: phone control must be from a touch-tone phone.

### LIGHTS AND APPLIANCE CONTROL ACCESS:

To control the lighting/appliance features from your phone access the system as you normally would (see local or remote phone access) and enter **8,8,8,8**. From a keypad, the **F1** or **F2** keys may be used instead of **8,8,8,8**. After entering **8,8,8,8** or **F1**, the system will speak the remote control list, naming the active list of remote controls in your system. Your installer can program names or words to each remote control unit, which can be used to describe the feature or area. At this point, enter a two-digit channel number from **01-56**. Your installer will let you know what channels control which lights or appliances. After entering the desired channel number, the system will echo your choice by speaking the programmed word descriptions for that channel, if words are programmed, if not the system will speak the channel number. To activate the channel, the **A** or \* key will turn the unit on, and the **H** or # key will turn the unit off. (The **A** or \* can be used to toggle between on and off). If the dimming option is enabled, then the **A** or \* key will step through six different levels of dimming (from full on to very dim). To exit remote control mode, enter **0,0** or any **F** key. If no digit is entered within 20 seconds, the system will automatically exit, returning to normal operation (keypad mode).

## 2 WAY AND LISTEN IN:

If your panel is equipped with microphones, any local or remote phone can be used for 2-way (talk/listen) communication with anyone in your residence.

1. Access the system from a local or remote phone. (See Local Access or Remote Access)
2. Press **9,9,9,9** to enter "Listen" mode.
3. Press **"#"** to talk; **"\*"** to listen.
4. When done, press **0** to return to keypad mode and then hang up. Not pressing any buttons for 120 seconds will cause the panel to automatically hang up (time is installer programmable).

**NOTE:** When in 2-way mode, the following key functions apply:

**Digit:** **1**= turns on microphone # 1  
**2**= turns on microphone # 2  
**3**= turns on microphone # 3  
**4**= turns off microphone # 1  
**5**= turns off microphone # 2  
**6**= turns off microphone # 3  
**7**= changes to "high microphone sensitivity"  
**8**= changes to "normal microphone sensitivity"  
**9**= all microphones on  
**0**= Exit to keypad mode/or will hang up  
**\***= Listen  
**#**= Talk

**NOTE:** Some Central stations may designate other key functions when in 2-way mode. If this is the case, the homeowner "listen in" will follow the new key assignments.

NEW DIGIT: 1. \_\_\_\_\_ 2. \_\_\_\_\_ 3. \_\_\_\_\_  
4. \_\_\_\_\_ 5. \_\_\_\_\_ 6. \_\_\_\_\_  
7. \_\_\_\_\_ 8. \_\_\_\_\_ 9. \_\_\_\_\_  
\*. \_\_\_\_\_ 9. \_\_\_\_\_ #. \_\_\_\_\_

## GLOSSARY

Below is a summary of terms and definitions used in this manual.

**ALERT-** The "alert" status indicates the system has been tripped, or activated. The system will remember the "alert" status until cleared. To clear the "alert" status, simply re-arm the panel.

**ANNUNCIATION-** Beep or speech emitted over the phone or through system speakers to announce activity or report system status.

**ARM-** To turn the security system ON to detect intrusion or protect the house. There are three available modes, or levels, of arming: AWAY, HOME, NIGHT.

**AWAY-** Arming mode for use when you are “AWAY” from the premises. All interior and perimeter devices are armed; intrusion and/or movement within the premises will activate the alarm.

**BYPASS-** To temporarily remove a device or zone from the system that would normally be active when the system is armed. If a zone is bypassed, it is not part of the system, and will not initiate an alarm.

**CENTRAL STATION-** If your security system is monitored, this is the agency that receives the incoming burglary or emergency message from the security system and reports it to the proper authorities.

**COMMUNICATOR-** The device in the security panel that reports all burglary and emergency alarms to the central station via the phone lines.

**CONTROL PANEL-** The heart of the security system. Only a qualified security system technician should open the container that houses the control panel.

**DAY ZONE-** A zone that will speak upon activation when the system is not armed, but will become an “instant” zone when the system is armed. The DAY ZONE will announce for a specified amount of time, or until it is silenced by the homeowner. This is accomplished by entering your disarm code followed by 5. EXAMPLE: A door leading to a pool area will announce when someone opens the door without the system armed, and will activate the alarm only when the system is armed.

**DISARM-** To turn the security system OFF or to silence alarm activation, including fire alarms, that may occur while the system is armed.

**DISARM CODE-** The three or four-digit number you enter to disarm the security system. The system will accept 32 different disarm codes, including disappearing and duress codes. Your disarm code allows you to control the alarm system from system keypads, local phones, and remote phones. Have your installer give you a list of the different codes.

**ENTRANCE DELAY-** Time permitted to enter the armed premises and disarm the security system before the alarm is activated. A 20-second delay is automatically set at the factory, but your installer can increase or decrease this amount of time as desired.

**EXIT DELAY-** Time permitted to leave the premises after arming the system. A 30-second delay is automatically set at the factory, but your alarm installer can increase or decrease this amount of time as desired.

**EXTENDED MONITOR-** Allows a zone to speak continuously or for a programmable time period when tripped. EXAMPLE: “Pool door open, pool door open...”

**FORCE ARM-** To override the security system’s initial refusal to arm because of an open zone. When a system is forced armed it will disregard or ignore any open zones until they have been closed.

**HOME-** Arming mode for use when you are at “HOME”. Only perimeter devices are armed allowing you to move about freely within the premises without fear of setting off the alarm. The system can be programmed to eliminate all entrance delays when armed to home. This might be preferable to individuals who live alone.

**INTERIOR ZONES-** Zones consisting of motion detectors and other devices that are located within the premises.

**LCD-** Liquid Crystal Display. Will display all system status in English text.

**LED-** Light Emitting Diode. These are used as indicators of the system conditions on keypads.

**NIGHT-** Arming mode used specifically for when everyone is in for the “NIGHT”. All perimeter zones become instant, there is no entry/exit delay, and some interior zones can be active.

**PERIMETER ZONES-** Zones consisting of door and window contacts and glass break detectors which will detect an intruder before he gains entry into the premises.

**PREALARM SPEECH-** When the system is armed, and someone enters the premises through a “delay” door, the system speaks “ENTRY DETECTED” followed by the word description programmed for that door. EXAMPLE: “ENTRY DETECTED, FRONT DOOR...ENTRY DETECTED, FRONT DOOR”. This speech will be heard for the duration of the entrance delay. If the disarm code is not entered within the programmed amount of time, the BURGLAR ALARM will sound. If an alarm took place while you were gone, then the system would speak “system showing alert”, followed by the pre-alarm speech.

**PREALARM TONE-** If prealarm speech is not programmed, there will be a steady, low volume sound emitted through the speakers when the entry delay door is opened. This tone will continue until the disarm code is entered to disarm the system. If the disarmed code is not entered within the programmed time, the BURGLAR ALARM will sound. A pulsing pre-alarm tone indicates there was activation while you were gone.

**ZONE-** Any area or point of protection in the security system such as doors, windows, and all other areas covered by detection devices.